



WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons: 1. This appliance should never be left unattended when plugged in. 2. Close supervision is necessary when this appliance is used by, on, or near children or the physically challenged. Unsupervised use could result in fire or personal injury. 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock: 1. Always unplug appliance immediately after using. 2. Do not place or store appliance where it can fall or be pulled into a tub or sink. 3. Do not place in, or drop into water or other liquid. 4. If an appliance falls into water, unplug it immediately. Do not reach into the water: 5. Never drop or insert any object into any opening. 6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. 7. Do not use an extension cord to operate appliance. 8. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or bare skin. 9. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. 10. Unplug this appliance before filling or emptying. Do not overfill.

IMPORTANT SAFETY INSTRUCTIONS — When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following: 1. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water; Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair. 2. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing. 3. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature. 4. Never drop or insert any object into any steam is being released to avoid contact with hot water. 5. Please be sure the unit is off and no qualified electrician. Do not attempt to defeat this safety feature. 6. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. 7. Do not use an extension cord to operate appliance. 8. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or bare skin. 9. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. 10. Unplug this appliance before filling or emptying. Do not overfill.

Service Center/Service Après-Vente/ Centro de Servicio
Service Department
10 Railroad Avenue
Beacon Falls, CT 06403

Travel Smart® is a trademark of Conair Corporation
Customer Service (800) 326-6247

www.conair.com

Travel Smart®, a division of Conair Corporation
10 Railroad Avenue, Beacon Falls, CT 06403
©2008 Conair Corporation

Travel Smart® es una marca registrada por Conair Corporation
Servicio post-venta (800) 326-6247

www.conair.com

Travel Smart®, es una división de Conair Corporation
10 Railroad Avenue, Beacon Falls, CT 06403
©2008 Conair Corporation

Travel Smart® est une marque déposée par Conair Corporation
Service après-vente : 1-800-326-6247

www.conair.com

Travel Smart®, est une division de Conair Corporation
10 Railroad Avenue, Beacon Falls, CT 06403
©2008 Conair Corporation

08FRZ170

IB-8540

1. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water; Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.
 2. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.
 3. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
 4. Never drop or insert any object into any opening. 5. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. 6. Do not use an extension cord to operate appliance. 7. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or bare skin. 8. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. 9. Do not use an extension cord to operate appliance. 10. Unplug this appliance before filling or emptying. Do not overfill.
1. While emitting steam, this appliance may cause burns if it is used too close to the skin, or if it is used incorrectly. To reduce the risk of contact with hot water coming from steam vents, test appliance before each use by holding it away from body. 2. Do not operate steamer without properly filling the water container. 3. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect. 4. Burns could occur from touching hot parts, hot water, or steam. Use care when you turn a steam appliance upside down — there may be hot water in reservoir. 5. To reduce likelihood of circuit overload, do not operate another high wattage appliance on the same circuit. 6. When installing or removing attachment, please be sure the unit is off and no steam is being released to avoid contact with hot water. 7. Use caution when installing or removing attachment as it may contain hot water from condensation. Ensure the attachment is dry or cooled off to avoid contact with hot water.

SELECCIÓN DEL VOLTAJE
Este aparato es de doble voltaje (120/240V) y podrá usarse en los Estados Unidos y en el extranjero, sin necesidad de utilizar un convertidor de voltaje.

1. Nunca deje este aparato desatendido mientras esté conectado.
 2. Este aparato no debería ser utilizado por, sobre o cerca de niños o personas con alguna discapacidad.
 3. Use este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
 4. Nunca utilice el aparato si el cable o la clavija estuviesen dañados, si no funcionase correctamente, si hubiese caído, si estuviese dañado o si hubiese caído al agua. No intente reparar el aparato. El ensamblar las partes de manera incorrecta aumenta los riesgos de incendio, electrocución y heridas. Regrese el aparato a un centro de servicio autorizado para que lo examinen y lo reparen.
 5. Mantenga el cable alejado de las superficies calientes. No jale, retuerza ni enrolle el cable alrededor del aparato. Oprima el pedal de enrollado del cable para guardarlo en la base. Permita que el aparato enfríe completamente antes de almacenarlo.
 6. El cable de este aparato está dotado de una clavija polarizada (un polo es más ancho que otro). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente. Si no entrara en el tomacorriente, invíértela. Si aún no entrara completamente, comuníquese con un electricista. No intente vencer esta función de seguridad.
 7. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.
 8. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
1. No coloque la boquilla en ninguna superficie mientras esté caliente o mientras el aparato esté conectado.
 2. Desenchufe el aparato antes de llenar el depósito de agua. No sobrellene el depósito.
 3. El vapor que sale de la boquilla es muy caliente. Para reducir los riesgos de quemadura, pruebe el aparato lejos de su cuerpo.
 4. Nunca opere el aparato con el depósito de agua vacío.
 5. Nunca jale el cable para desconectar el aparato. Cójalo por la clavija.
 6. Las partes calientes, el agua caliente y el vapor pueden causar heridas. Tenga cuidado al vaciar el tanque, puesto que podría contener agua caliente.
 7. Para evitar los riesgos de sobrecarga eléctrica, no opere ningún otro aparato de alto vataje al mismo tiempo como éste.
 8. Asegúrese que el aparato esté apagado y que no esté emitiendo vapor antes de instalar o remover el cepillo.
 9. Remueva el cepillo con cuidado, puesto que podría contener agua caliente. Asegúrese que el cepillo esté seco y frío antes de manipularlo.

ESPAÑOL

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO — Cualquier electrodoméstico permanece bajo tensión, aunque el interruptor esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. Siempre desconecte el aparato inmediatamente después de usarlo.
2. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
3. No coloque el aparato ni lo deje caer al agua u otro líquido.
4. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

LIMITED ONE-YEAR WARRANTY

Your garment steamer includes a brush attachment. Do not attempt to attach or remove the brush attachment while unit is steaming or hot. Wait until unit is completely cool. Place the brush onto the steamer head by simply pushing the brush onto the front of the steamer head. The wider portion of the brush attachment should be toward the bottom of the unit.

TO MAKE CREASES OR PLEATS

1. Hang garment. 2. Fold fabric where crease or pleat is desired. 3. Apply steam to garment.

TO MAKE CREASES OR PLEATS

1. Hang garment. 2. Fold fabric where crease or pleat is desired. 3. Apply steam to garment.

TO STEAM SHOULDERS AND SLEEVES

1. Hang garment, preferably on a padded hanger. 2. Fill out shoulders or sleeves with folded towel. 3. Apply steam directly to the garment.

TO STEAM TIES

1. Hang tie on hanger. 2. Apply steam directly to tie.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

TO STEAM GARMENTS OR DRAPES

1. Hang up garment/drapery. 2. Gently hold fabric taut with one hand and hold steamer with the other hand. 3. Slowly run the steam head up and down and side to side. To remove stubborn wrinkles, side to side. To remove stubborn wrinkles, vertical position.

1. Be sure garment steamer is unplugged. 2. Release handle by pushing red button. 3. While holding main body of steamer, twist steamer head counterclockwise and lift it to remove. 4. Fill reservoir with ordinary tap water to max fill line. **DO NOT OVERFILL.** 5. Replace steamer head on steamer body, twisting clockwise into locked position. 6. If steam is spitting or dripping, this indicates that there may be too much water in the unit. For the best performance, we strongly recommend filling the reservoir with less water. 7. Attach brush accessory to steamer if desired. (Please refer to brush attachment section) 8. Place appliance on a flat surface in an upright position. Plug into electrical outlet.

HOW TO USE OPERATING INSTRUCTIONS

SAVE THESE INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

HOW TO USE OPERATING INSTRUCTIONS

NOTE: This unit is thermostatically protected to shut off when water has boiled away. You should unplug the unit before this occurs because hazardous and may damage unit. Before using the garment steamer for the first time, it is recommended to operate the steamer for approximately 5 minutes, unplugging the unit and allow it to cool. Empty container and refill before actually using.

